



FRONT

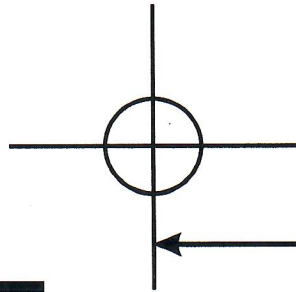

5 3/8"

FRONT

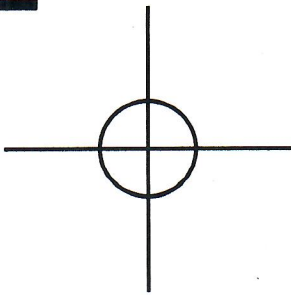

Anchor Bolt Installation Template

KeyPort Model — FS


Use Hammer Drill and 1/2" Diameter
Carbide-Tipped Masonry Bit (Drill 4" Deep)

**ALWAYS WEAR APPROPRIATE SAFETY
EQUIPMENT WHEN INSTALLING KeyPort!!!**

For technical assistance with the installation
of this unit, contact: LIS @ (918) 342-3127

Manufactured in the USA by:

LIS, LLC
Claremore, OK

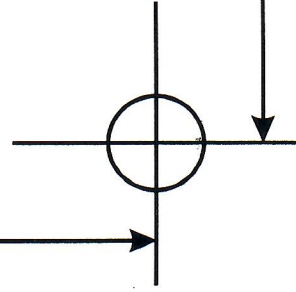

7 5/8"

