



**3Es** EVERY CUSTOMER.  
EVERY VEHICLE.  
EVERY TIME.

# Complete Clean Pledge – Longhouse Odor Wrecker Procedure

*(Always wear safety glasses and gloves.)*

**Necessary tools:** Safety glasses, gloves, Longhouse Odor Wrecker cup and tablet packet, in-use magnet and hat

## Pretreatment Preparation

### Step 1: Vehicle Preparation

- Clean and sanitize the vehicle.
- Clean any stains with carpet cleaner or extractor, and allow the surface to fully dry to maximize the odor removal of the treatment.
- Park the vehicle outdoors in a shaded, secure area to allow for proper ventilation and to avoid carbon monoxide exposure while the vehicle is running.  
**Note:** Parking the vehicle in the sunlight will decrease the treatment's effectiveness.
- Replace the cabin air filter, if necessary.  
**Note:** This is often required to fully remove odors.
- Buckle the seat belts, and extend them so that they are completely out of the retractor and fully exposed.
- Open all compartments.
- Lower the sun visors.
- Fully close all windows and doors.
- Place the "Danger! Do Not Enter" hat on the roof of the vehicle, and place the magnet on the door.  
**Note:** Never skip this step. This is an operational control to ensure that the vehicle remains "locked out" during the treatment.



### Step 2: Interior Temperature Adjustment (As Needed)

**Note:** The treatment works best when the vehicle's interior temperature is 50°–80°F for the duration of the treatment.

- Complete the treatment in a shaded area on mild-weather days or overnight.

### Step 3: Cup Preparation

- Fill the provided eight-ounce cup to the line with water.



**3Es** EVERY CUSTOMER.  
EVERY VEHICLE.  
EVERY TIME.


## Complete Clean Pledge – Longhouse Odor Wrecker Procedure

(Always wear safety glasses and gloves.)

### Treatment Process

#### Step 4: Vehicle Treatment

- Enter the vehicle with the tablet packet and the filled cup.  
**Note:** Wear safety glasses and protective gloves so the solution does not touch your skin.
- Place the cup in the center cup holder.  
**Note:** Set the lid aside in the vehicle for later use.
- Set the HVAC so that recirculating air flows through the instrument panel vents at a target temperature of 75°F, and turn the fan to its maximum speed.
- Open all panel vents so air flows at your face.
- Carefully remove the tablet from the foil pack, and gently place the tablet in the filled cup.  
**Note:** Do not inhale the fumes.
- Leave the vehicle turned on during treatment **unless** you are performing an overnight treatment.
- Exit the vehicle immediately, close the door, lock the doors, and keep the keys with you.  
**Note:** Never skip this step. This is an operational control to ensure that the vehicle remains “locked out” during the treatment. This product is a lung irritant—no one should be in the vehicle while the treatment is in progress.
- Do not reopen the door until the treatment is complete—a minimum of 30 minutes; allow more time for serious odors.**

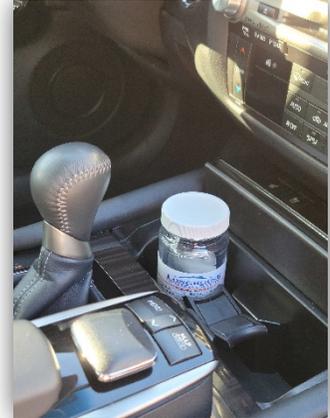

#### Step 5: Posttreatment

- Open all doors and the trunk or rear hatch.
- Allow the vehicle to air out for 5 minutes in a secure location.  
**Optional:** Turn on the vehicle, and set the fan to recirculate air during this time.
- Place the lid back on the cup, and remove the cup from the vehicle.
- Remove the hat and magnet.

#### Step 6: Cleanup

- Pour any remaining solution down the drain.  
**Note:** When the tablet is fully dissolved and dissipated (i.e., when the solution is completely clear), the remaining solution is just saltwater. Do **not** drink it.