

# COSCO<sup>®</sup> SCENERA NEXT

CONVERTIBLE CAR SEAT


**Rear Facing:** 5-40 lb and 19-40 in. (2.3-18 kg and 48-101.6 cm)

Forward Facing: 22-40 lb and 29-43 in. and at least 1 year old (10.1-18 kg and 73.6-110 cm)


KEEP INSTRUCTIONS FOR FUTURE USE. Read all instructions before using this child restraint.

# **A**WARNING:

Failure to follow the warnings on the labels and in the instruction manual can result in serious injury or death to your child.

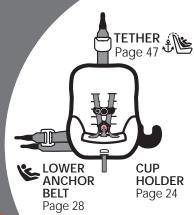



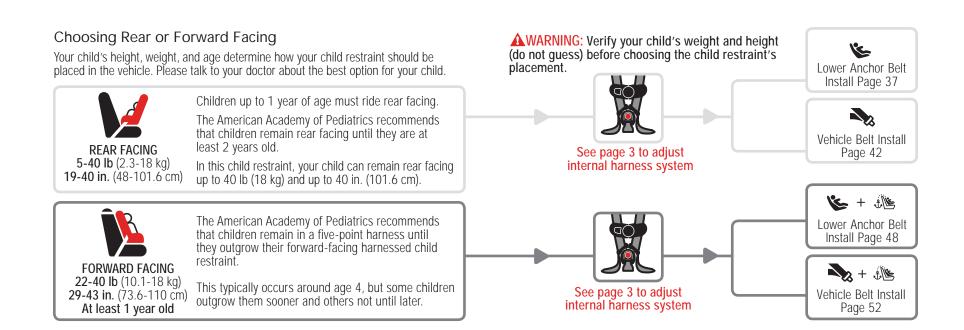

# Table of Contents

Getting Started1
Parts of the Child Restraint1
Prepare Child Restraint to Fit Your Child
How Does Your Child Fit?4
Changing Position of Buckle 6
Changing Position of Shoulder Harness Strap8
Harness System Adjustments for Smaller Infants10
Securing Child in Child Restraint15

# General Use ..... 18


Removing Harness System 18
Removing Seat Pad for Cleaning 20
Installing Harness System
Accessories on Select Models 24


Safety Information Child Restraint Use Vehicle Seating Position Installation in Vehicle	. 25 . 26
Vehicle Information	. 28
or Vehicle Belts	. 28
Knowing Your Vehicle Belts	. 31
Aircraft Information	. 35

Rea	r Facing	36
K.	Lower Anchor Belt Installation	37
	Vehicle Belt Installation	42
For	ward Facing	46
	Tether Use	47
1 <sup>k</sup>	Lower Anchor Belt Installation	48
	Vehicle Belt Installation	52

Important Information	55
Using a Locking Clip	55
Dorel Juvenile Group Information	57
Registration and Safety Notices	58
Troubleshooting	59
Replacement Parts Order Form	60
Warranty	62

# Parts of the Child Restraint

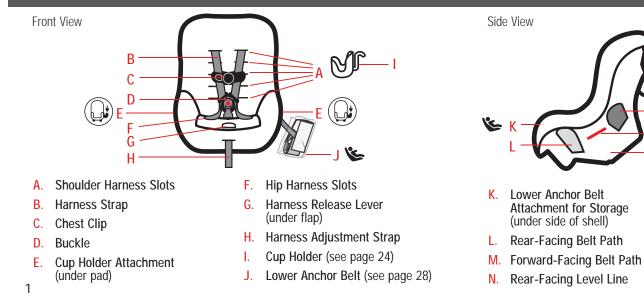

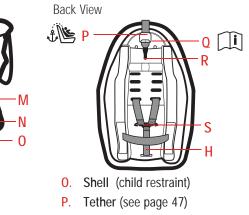

- Q. Instruction Manual Storage
- **R**. Tether Attachment for Storage
  - Splitter Plate

S.

# Prepare Child Restraint to Fit Your Child



1. Fully Loosen Harness Strap Push down on harness release lever (under flap on front of seat

pad) while pulling out

on harness strap as

shown.



# 3. Release Chest Clip Press on chest clip release button and pull apart. Place harness

strap out of the way.



2. Unbuckle Harness Press in towards the top of the red button. Pull buckle tongues out.



4. Place Child in Child Restraint to **Determine Proper** Harness Fit The child's bottom

and back should be flat against the

child restraint. See pages 4-5 for fit quidelines.

# How Does Your Child Fit?

Use the guidelines below to determine if the buckle and harness strap are in the right place for your child.

**REAR FACING** 



# **Buckle Position**

Start in the 1st slot and adjust outward as your child grows.

Buckle should be used in the slot closest to your child. The buckle should be not underneath or behind your child.

1st or 2nd slot MUST be used.

To change the buckle position, see pages 6-7. To change harness strap position, see pages 8-9.

To make adjustments for smaller infants, see pages 10-14.

continued on next page 4

Harness Strap

shoulders. Always

choose the shoulder

Harness strap MUST be at or slightly below

Position

harness slot closest to your child's

If the lowest shoulder harness slots are

above the child's shoulders, do not use

shoulder height.

this child restraint.





Any slot can be used.

# FORWARD FACING **Buckle Position**

Start in the 1st slot and adjust outward as your child grows. Buckle should be used in the slot clos-

est to your child. The buckle should not be underneath or behind your child.

To change the buckle position, see pages 6-7.

To change harness strap position, see pages 8-9.

# Harness Strap Position

Harness strap MUST be at or slightly above shoulders.

Always choose the shoulder harness slot closest to your child's shoulder height.

If the highest shoulder harness slots are below the child's shoulders, **do not** use this child restraint.




1. Turn Seat Over Locate buckle's metal retainer on bottom of shell.

Changing Position of Buckle



3. From Top of Seat, Pull Buckle Out of Shell





Buckle **MUST** face out.

You **MUST** use the 1st

or 2nd buckle slots when child restraint is used rear facing. Any slot can be used when forward facing.

continued on next page 6





5. Pull Metal Retainer Completely Through Pad and Shell

**WARNING:** Failure to place buckle's metal retainer completely through pad and shell can result in serious injury or death.



1. Fully Loosen Harness Strap Push down on harness release lever (under flap on front of seat pad) while pulling out on harness strap

Changing Position of Shoulder Harness Strap



3. Pull Harness Strap Out of Shoulder Harness Slots



6. Check Buckle

Pull up on buckle to make sure it is secured.

The buckle MUST not pull out.

7



as shown.

Strap Loops From Splitter Plate



If you will be using the lowest shoulder harness slots, see pages 10-14. Otherwise, continue on to step 4.



4. Rethread Harness Strap into Correct Shoulder Harness Slots For Your Child

See pages 4-5 for fit quidelines.



5. Attach Harness Strap Loops to Splitter Plate

Sewn ends of the harness strap loops MUST face towards

you. DO NOT twist harness strap or harness adjustment strap. Make sure the harness strap loops are fitted COMPLETELY ON both sides of the splitter plate.

WARNINGS: Make sure the harness height is correct for your child's size.

> Do not use this child restraint rear facing unless the top of your child's head is at least 1 in. (2.5 cm) below the top of the child restraint.

	Do not use this child
	restraint forward facing
1	if the tops of your
- 1	child's ears are above
	the top of the child
	restraint

Failure to follow these steps can result in serious injury or death.

Harness System Adjustments for Smaller Infants



When using the lowest shoulder harness slots, you MUST make these adjustments.



1. Pull Up Front of Seat Pad



3. From Bottom of Seat, Pull Metal **Retainer Towards** You and Push It Up into Middle Slot As Shown



the 1st Slot As Shown, Turn the

If you need to move the buckle to the 1st slot, see page 6.



4. From Top of Seat, Lay the Metal Retainer Flat Against the Shell Aš Shown





Pull up on buckle to make sure it is secured. The buckle MUST not pull out.



7. From Back, Remove Harness Strap Loops From Splitter Plate



9. Unthread Chest Clip

10. Unthread Buckle

buckle.

Do not unbuckle the







6. Fully Loosen Harness Strap Push down on harness release lever (under flap on front of seat pad) while pulling out on harness strap as shown.



8. Pull Harness Straps Out of Shoulder Harness Slots





11. Turn Seat Over and Pull Harness Strap Down and Out of Hip Harness



Harness strap goes behind buckle strap.



continued on next page 12



13. Thread Harness Strap Up Through Slot in Seat Pad



15. Thread Buckle and Chest Clip

Harness strap end goes through the **back** of buckle tongues and through the chest clip <u>front to</u> <u>back</u> as shown.



17. Attach Harness Strap Loops to Splitter Plate

Sewn ends of the harness strap loops MUST face towards you.




18. Replace Seat Pad Around Front of Shell



14. Make Harness Strap Even Sewn ends of harness strap loops MUST face each other.



16. Thread Harness Strap Into Lowest Shoulder Harness Slots



harness strap or harness adjustment strap. Make sure the harness strap loops are fitted COMPLETELY ON both sides of the splitter plate.



Failure to follow these warnings can result in serious injury or death.



# Securing Child in Child Restraint



Position harness strap over child's shoulders and upper thighs.

Child Restraint The child's bottom and back should be flat against the child restraint.



# 3. Close Chest Clip

Insert right half of chest clip into left half and snap together.



### 5. Position Chest Clip

The chest clip must be placed at midchest (even with armpits) and away from the child's neck.



Try to pinch the harness at the shoulders vertically between index finger and thumb as shown.

If your fingers slip off, the harness is tight enough.

# If you can pinch the harness strap,

tighten more. The harness strap should be snug throughout its length.

A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

continued on next page 16



# 2. Buckle Harness

Push buckle tongues into buckle until you hear a "click." Pull up on harness strap to make sure buckle is locked.



# 4. Tighten Harness Pull on harness

adjustment strap to tighten harness snugly.

**A**WARNINGS: Failure to fasten and tighten the harness system correctly may allow the child to be ejected from the child restraint in a crash or sudden stop causing serious injury or death.

Do not mistake comfort for safety. Harness system must be snugly adjusted.

DO NOT put snowsuits or bulky garments on your child when placing them in the child restraint.

Bulky clothing can prevent the harness straps from being tightened properly.

Only remove the harness system to clean the seat pad.

Removing Harness System



1. Fully Loosen Harness Strap Push down on harness release lever (under flap on front of seat pad) while pulling out on harness strap as shown.





To Remove Child From Child Restraint

- 1. Loosen Harness Strap
- 2. Unbuckle Harness

- 3. Release Chest Clip
- 4. Remove Child



2. From Back, Remove Harness Strap Loops From Splitter Plate



- continued on next page 18





5. Unthread Buckle Do not unbuckle the buckle.

6. Pull Harness



8. Rotate Metal Retainer and Push It Up Through Shell and Pad



shell. See pages 18-19.

Remove Pad Pull pad off the bottom of child restraint and remove pad.

You must remove the harness system to remove the pad from the

**WARNINGS:** Do not use child restraint without the seat pad.

Removing Seat Pad for Cleaning

Failure to do this can result in serious injury or death.

# **Cleaning Pad**

Machine wash separately with cold water on a gentle cycle. Do not use bleach. Tumble dry separately for 10-12 minutes on low heat. Remove immediately.

# Cleaning Harness Strap

Spot clean using warm sudsy water and damp cloth.

# Replacing Pad

Starting from bottom of child restraint, slip pad on shell. Pull harness adjustment strap through pad. Wrap pad around the top of shell. Install harness system, see pages 21-23.

20



7. Turn Seat Over

Locate buckle's metal retainer on bottom of shell.

9. From Top of Seat, Pull Buckle Out of Shell

Strap Out of Seat



Installing Harness System



If you will be using the lowest shoulder harness slots, see pages 10-14.

Otherwise, continue on to step 1.

1. Insert Buckle's

Metal Retainer into

Slot Closest to Child

Buckle MUST face out.

You MUST use the 1st

when child restraint is

or 2nd buckle slots

used rear facing. Any slot can be used



2. Pull Metal Retainer Completely Through Pad and Shell



3. Check Buckle Pull up on buckle to make sure it is secured. The buckle MUST not pull out.



# 4. Rethread Harness Strap

With sewn end of harness strap loop facing the buckle, thread harness strap down through hip harness slot.

5. Pull Harness

Bottom of Shell

Harness strap MUST

lie in front of harness

adjustment strap as

shown. Push harness

strap up through

other hip harness

slot.

Strap Across





Sewn ends of harness strap loops MUST face each other.



# 7. Thread Buckle and Chest Clip

Harness strap ends go through the <u>back</u> of buckle tongues and through the chest clip <u>front to back</u> as shown.





8. Thread Harness Strap Into Correct Shoulder Harness Slots For Your Child See pages 4-5 for fit guidelines.



DO NOT twist harness strap or harness adjustment strap. Make sure the harness strap loops are fitted COMPLETELY ON both sides of the splitter plate.

WARNINGS: Failure



Strap Loops to Splitter Plate Sewn ends of the harness strap loops MUST face towards you.



to place harness adjustment strap behind the harness strap as shown can result in serious injury or death.

Harness system must be installed correctly.

Failure to follow these warnings can result in serious injury or death.

# Accessories on Select Models

pull the fabric

tabs out from the shoulder

into shoulder harness slots.

To attach, slide the fabric tabs

harness slots.





# Cup Holder

The cup holder can be attached to either side of the shell.

Pull pad off corner of shell. Align symbol on cup holder with symbol on shell.

Hook bottom of cup holder under edge of shell. Snap top of cup holder over edge of shell.

Replace pad.

The cupholder is dishwasher safe.



# Child Restraint Use

Vehicle Seating Position

Never take your child out of the child restraint while the vehicle is moving.

Never leave child unattended.

Placing your child in a hot child restraint may result in burns.

Do not use a child restraint with damaged or missing parts.

Do not use cut, frayed or damaged harnesses.

Do not substitute parts or try to modify the child restraint in any way.

Do not lubricate buckles and fasteners.

Do not use any child restraint accessory except those approved by Dorel Juvenile Group.

Never allow any child to play with this child restraint; it is not a toy.

Do not remove or cover up any of the warning labels or other labels on the child restraint.

Read all instructions for additional warnings.

On the side of the child restraint there is a date of manufacture label. Do not use this child restraint more than 8 years after the date of manufacture. Check the vehicle belt or lower anchor belt before each use. Use only if the belt can be tightened properly and locked securely in place.

This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child restraint could injure occupants.

Do not use a child restraint that has been in a crash. You must get a new child restraint.

### Installation in Vehicle



Never install a rear-facing child restraint in the front seat of a vehicle equipped with an active passenger side frontal airbag. Always check vehicle owner's manual for child restraint use with side airbags.

Check the vehicle owner's manual for more information about air bag/child restraint use.



Use the child restraint only on vehicle seats that face forward.

Do not use on seats that face the sides or rear of the vehicle.

Use the center seating position if possible.

For vehicles without a back seat, refer to your vehicle owner's manual.

continued on next page 26

# Choosing Lower Anchor or Vehicle Belts

Your vehicle's features may be considerably

different than those pictured here.

12

Lower

Anchor Bars

Seat Bight



# The LATCH System

The lower anchors of LATCH (Lower Anchors and Tethers for CHildren) is a universal system for installing child restraints without using vehicle seat belts.

The lower anchor system can ONLY be used in vehicles that have the lower anchor bars installed and designated LATCH seating positions.

Most vehicles manufactured after September 2002 are equipped with lower anchor bars. Check your vehicle owner's manual to see which seating positions may be equipped with the LATCH system.

continued on next page 28

If you are not sure where to place the child restraint in your vehicle, consult your vehicle owner's manual, contact Dorel Juvenile Group Care Department (see page 57), or visit your local Child Passenger Inspection Station. Go to http://www.safercar.gov/cpsApp/cps/ index.htm to find your closest station.



Children are safer when properly restrained in

rear seating positions than in the front seating positions.

According to National Highway Traffic Safety Administration information, children in rear seating positions are statistically 27

burned, take the following precautions:
1. Park in the shade or where sun does not directly hit the child restraint.

at all.

**2.** Cover the child restraint with a sheet or blanket when not in use.

**3.** Check for hot seat and buckles before placing child in child restraint.

safer, whether you have air bags,

advanced air bags, or no air bags

To avoid your child being seriously

To help protect your vehicle seat's upholstery from damage, use a single layer towel underneath and behind child restraint.




When installing this child restraint with vehicle belts, the lower anchor hooks and belt MUST be properly stored.

## Storing Lower Anchor Belt:

When used rear facing, thread lower anchor belt through forward-facing belt path as shown. Then attach hooks to attachments near rear-facing belt path as shown. Gently pull free end of belt to remove slack.



When used forward facing, thread lower anchor belt through rear-facing belt path. Then attach hooks to attachments near rear-facing belt path as shown. Gently pull free end of belt to remove slack.

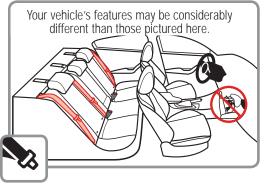

# Vehicle Belts

If lower anchors are not an option, you must use the vehicle seat belt system to install the child restraint.

There are some vehicle belts that will not work with a child restraint or will require special attention.

Check your vehicle owner's manual for specific instructions.

WARNINGS: When used correctly the lower anchor belt or vehicle belts are equally safe. Do not use both the lower anchor belt and vehicle belt at the same time.



Not all vehicle belts and seating positions will work with child restraints. Please follow the following steps to understand how to lock a child restraint with a vehicle belt.



1. You MUST Review Your Vehicle Owner's Manual



Your vehicle owner's manual will let you know what vehicle

belts and seating positions child restraints can be installed in.

The vehicle belt MUST NOT loosen after tightening.

This means there needs to be a way to lock the vehicle belt.

Place


2. Determine How

the Child Restraint

Will Be Locked Into

The ways this can be done are:

- By using the seat belt's retractor; or
- By using the seat belt's latch plate.



Retractors pull seat belts into stored positions and lock the belt to hold passengers in place.

A retractor is most likely how you will be locking a child restraint into place.

See the following "Types of Retractors" section for some common types of vehicle belt retractors that will work with this child restraint.

# Types of Retractors



This retractor can be switched to a locking mode. You MUST have the retractor in the locking mode to use the seat belt with this child restraint.

Switching to locking mode: Slowly pull the shoulder belt all the way out, then let it go back in an inch or two.

As it goes back in, you will most likely hear a ratcheting sound.

Gently pull the belt to see if it has locked. You will not be able to pull any more belt out if the lock has engaged.

continued on next page 32

 $\checkmark$ 



## Automatic Locking Retractor

This retractor always locks.

It will automatically lock after slowly pulling the seat belt out at least halfway and letting the belt go back into the retractor an inch or two.



If the retractor does not lock, it is most likely an Emergency Locking Retractor. These retractors only lock during a sudden stop or collision. a sud-Locking Latch Plate

 $\checkmark$ 



You will need to determine if your seat

belt's latch plate can lock the belt. See

Step 4, "Check the Latch Plates."

buckle. Hold the lap belt with one hand and with your other hand grasp the tongue of the latch plate (the part that goes inside the buckle). Pull the latch plate straight out in line

with the lap belt.

If the latch plate does not slide up and down the vehicle belt, it is a **locking latch plate**.



Emergency

Locking

Retractor

with a Sliding

Latch Plate

If the latch plate slides up and down the vehicle belt, it is a **sliding latch plate**.

Sliding latch plates easily slip between the lap and shoulder portions of the belt.

If you have an Emergency Locking Retractor with a Sliding Latch Plate, you **MUST** use a locking clip to install the child restraint. See pages 55-56.





# Aircraft Information

This restraint is certified for aircraft use. Install the child restraint in a window seat

to avoid blocking the aisle. If the aircraft lap belt is too short, ask the flight atten-

Use only on forward facing aircraft seats.

Contact the airline for their specific

dant for a belt extender.

**Rear Facing** 







Lap Belt

23



**5-40 lb** (2.3-18 kg) Lower Anchor Belt 19-40 in. (48-101.6 cm) 14

Lap/Shoulder Belt 



**WARNINGS:** Never place a child rear facing in a seating position with an active frontal air bag. This can result in serious injury or death.

This child restraint MUST always face the rear of the vehicle when the child is less than 1 year old.

The American Academy of Pediatrics recommends that children remain rear facing until they are at least 2 years old. Please talk to your doctor about the best option for your child.

35

For rear facing pages 42-45.



Forward Facing Aircraft Installation For forward facing installation follow pages 52-54.

There is an airplane

this child restraint as

certification label located on the side of

shown.

Some airlines may ask to see a label stating that this child restraint is certified

for aircraft use.

policies.



Lower Anchor Belt Installation

WARNINGS: Do not use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check lower anchor belt before each use. Use only if the belt can be tightened properly and securely.

Do not fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.



Secure the tether hook when used rear facing. Attach the tether hook to storage attachment as shown and gently

tighten to remove slack.

Failure to follow these warnings can result in serious injury or death. 37



2. Route Lower Anchor Belt Through Rear-Facing Belt Path

1. Remove Lower

Anchor Belt from

Storage Location

Remove it from the rear-facing belt path

so both hooks are on

the same side of the

seat as shown.

The lower anchor belt adjuster can be on either side.



3. Reach Under Pad and Pull Hook Across to Opposite Side

Belt MUST be in front of buckle strap.

You **MUST** use the 1st or 2nd buckle slot. **Do not** place belt over child's legs. **Do not twist belt**.



4. Finished Lower Anchor Belt Routing



5. Place Child Restraint Rear Facing in Back Seat



6. Check Level Line For children who cannot sit up unassisted, the level line on shell MUST be parallel with the ground.

For children who can sit up unassisted, you may rotate the child restraint to be more upright.



7. Attach Lower Anchor Hooks to Vehicle's Lower Anchors

Review your vehicle owner's manual for lower anchor locations and lower anchor belt use.



8. Tighten Belt Place hand in child restraint.

> Firmly push child restraint down and back towards the vehicle seat back

while pulling free end of belt to tighten.

It may be easier to pull pad away from shell and tighten the belt through the belt path opening as shown.



# Tightness Hold child restraint at the belt path with your weakest hand.

Push and pull from side to side. It should not move more than 1 in. (2.5 cm).

If it moves more than 1 in. (2.5 cm), you can try:

**A.** Pulling the belt tighter.

**B.** Reinstalling the child restraint.

**C**. Changing to a different seating location.

**D.** Switching to vehicle belt installation.



10. Secure Child in Child Restraint See pages 15-17.



### 11. Recheck Level Line

Repeat steps 6-11 if level line is not parallel with the ground.



**NOTE:** You may need to place a large rolled towel(s) or foam pool noodle(s) under front of child restraint to help make level line parallel with the ground.

Check often to be sure padding is still in place and the belt is tight.





by pushing down on side of child restraint with the lower anchor belt adjuster. Then press the adjuster button to loosen belt. Unhook from anchor by

To Release Lower

Remove child from

Anchor Belt


squeezing spring lever on hook, pushing hook back into the seat bight, and twisting. Then pull it out of the vehicle seat.

Store lower anchor belt when not in use. See page 29.

# Vehicle Belt Installation







Secure lower anchor hooks to storage attachments as shown when installing with vehicle belts.

Secure the tether hook when used rear facing. Attach the tether hook to storage attachment as shown and gently tighten to remove slack.

Check vehicle belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Failure to follow these warnings can result in serious injury or death.





1. Place Child Restraint Rear Facing in Back Seat

2. Check Level Line

unassisted, the level

line on shell MUST

be parallel with the

For children who

cannot sit up

ground.



Vehicle Belts Will Work With This Child Restraint This is very important because not all

3. Check if Your

# vehicle belts will work with child restraints.

Review pages 31-34 and your vehicle owner's manual to determine what kind of vehicle belt you have and how to lock a child restraint in place.

For children who can sit up unassisted, you may rotate the child restraint to be more upright.



4. Route Vehicle Lap or Lap/Shoulder Belt Through Rear-Facing Belt Path



5. Reach Under Pad and Pull Vehicle Belt Across the Shell

Belt MUST be in front of the buckle strap. You MUST use the 1st or 2nd

buckle slot. **Do not** place belt over child's legs. **Do not twist belt**.



6. Buckle Vehicle



7. Tighten Belt Place hand in child restraint.

Firmly push child restraint down and back towards the

vehicle seat back while pulling shoulder belt or the free end of lap belt to tighten.



8. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand. Push and pull from

side to side. It should not move more than 1 in. (2.5 cm).

continued on next page 44

# If it moves more than 1 in. (2.5 cm), you can try:

A. Pulling the belt tighter.

**B.** Reinstalling the child restraint.

**C.** Changing to a different seating location.

**D.** Switching to the lower anchor belt installation if lower anchors are available in your vehicle.




9. Secure Child in Child Restraint See pages 15-17.



# 10. Recheck Level Line

Repeat steps 2-5 if level line is not parallel with the ground.



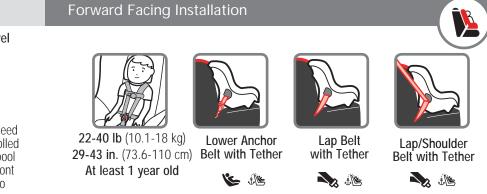

# **WARNINGS:** In this child restraint your child MUST be at least 1 year old before they sit forward facing.

The American Academy of Pediatrics recommends that children remain rear facing until they are at least 2 years old and remain in a five-point harness until they outgrow their forward-facing harnessed child restraint. Please talk to your doctor about the best option for your child.



# Tether Use

You MUST always attach, adjust, and secure the top anchorage (tether) strap when installing the child restraint forward facing with internal harness. Tethers improve the installation and stability of child restraints and reduce the risk of injury. Attach the tether hook to the tether anchor designated by your vehicle manufacturer for that seating position. Check your vehicle owner's manual for more information. If the seating position does not have a tether anchor, use a different seating position or see your dealer or a qualified mechanic and have one installed.

WARNING: Do not fasten multiple tether hooks on the same tether anchor in the vehicle.



Pull free

# Adjusting Tether Strap

To tighten: After the child restraint is locked into place with lower anchor belt or vehicle belt, push down on child restraint and gently pull on free end of tether.

**To loosen:** Lift up on tether lock adjuster and push it towards tether hook.



Storing Tether Strap When installing rear facing or when not in use, attach the tether hook

to its storage attachment on the back of the shell as shown. Gently tighten to remove slack.

# Lower Anchor Belt Installation

WARNINGS: Do not use the lower anchor belt along with the vehicle lap or lap/shoulder belt.

Check the lower anchor belt before each use. Use only if the belt can be tightened properly and securely.

Do not fasten multiple lower anchor hooks on the same lower anchor bar in the vehicle.

Failure to follow these warnings can result in serious injury or death.



1. Remove Lower Anchor Belt from Storage Location

Remove it from the rear-facing belt path so both hooks are on the same side of the seat as shown.



2. Route Lower Anchor Belt Through Forward-Facing Belt Path

Do not twist belt.

The lower anchor belt adjuster can be on either side.





3. Finished Lower Anchor Belt Routing



5. Loosely Attach Tether Hook Check vehicle owner's manual for specific



7. Tighten Belt Place hand in child restraint.

Firmly push down while pulling free end of belt to tighten.

# 8. Tighten Tether

Push firmly on the back of the seat and pull the tether strap to remove all slack and create tension on the strap.



4. Place Child Restraint Forward Facing Flush Against Vehicle Seat Back



6. Attach Lower Anchor Hooks to Vehicle's Lower Anchors

Review your vehicle owner's manual for lower anchor locations and lower anchor belt use.



It may be easier to pull back the pad and pull the free end of the belt parallel with the belt path as shown.



# 9. Check Belt Tightness Hold child restraint

at the belt path with your weakest hand. Push and pull from side to side.

It should not move more than 1 in. (2.5 cm). If it moves more than 1 in. (2.5 cm), you can try:

**A**. Putting your knee in the seat and pulling the belt tighter.

- A. Reinstalling the child restraint.
- **C.** Changing to a different seating location.
- **D.** Switching to vehicle belt installation.



To Release Lower Anchor Belt

Remove child from child restraint.

Remove tension from the lower anchor belt by pushing down on side of child restraint with the lower anchor belt adjuster. Then press the adjuster button to loosen belt.

Unhook from anchor by squeezing spring lever on hook, pushing hook back into the seat bight, and twisting. Then pull it out of the vehicle seat.

Store lower anchor belt when not in use. See page 29.

# Vehicle Belt Installation

# A WARNINGS: Do not use the



lower anchor belt along with the vehicle lap or lap/ shoulder belt. Secure lower

anchor hooks to storage attachments as shown when installing with vehicle belts.

Check vehicle belt before each use. Use only if the belt can be tightened properly and locked securely in place.

Failure to follow these warnings can result in serious injury or death.









continued on next page 52



restraints.

3. Check if Your Vehicle Belts Will Work With This **Child Restraint** This is very important because not

all vehicle belts will work with child

Review pages 31-34 and your vehicle

a child restraint in place.

owner's manual to determine what kind



Lap or Lap/Shoulder Belt Through Forward-Facing Belt Path

4. Route Vehicle

6. Tighten Tether Push firmly on the back of the seat and

pull the tether strap to remove all slack and create tension on the strap.

# 8. Check Belt Tightness

Hold child restraint at the belt path with your weakest hand.


Push and pull from side to side. It should not move more than 1 in. (2.5 cm). If it moves more than 1 in. (2.5 cm), you can try:

A. Putting your knee in the seat and pulling the belt tighter.

**A.** Reinstalling the child restraint.

**C.** Changing to a different seating location.

**D**. Switching to the lower anchor belt installation if lower anchors are available in your vehicle.



5. Buckle Vehicle Belt Do not twist belt.











# Using a Locking Clip

You will rarely need to use a locking clip except in some older vehicles.

Built-in child restraint locking systems have been required in vehicles since 1996 and many vehicles had these features even earlier. Review pages 31-34 and your vehicle owner's manual to determine if your vehicle belts require a locking clip.

If you need a locking clip immediately, they are likely available at an auto dealership, an auto store, or where you purchased this child restraint. You can also call us at 1-800-544-1108 for one.

A locking clip will not fix all types of seat belt problems. You **MUST** have a lap and shoulder belt to use a locking clip. **For Rear Facing installation**, follow Pages 42-44 Warnings and Steps 1-7 before starting locking clip installation.

**For Forward Facing installation**, follow Pages 52-54 Warnings and Steps 1-7 before starting locking clip installation.



1. Determine Locking Clip Position Grasp both vehicle belts

together just behind the latch plate to mark the position for locking clip. Unbuckle the belt.

**NOTE:** If the latch plate ends up just at the belt path opening so you cannot grasp the vehicle belt at the latch plate, grasp the vehicle belts on the opposite side of the child restraint, as close to the latch plate as possible.



### 2. Attach Locking Clip

Thread both portions of the vehicle belt onto the locking clip, as close to the latch plate as possible.

3. Position Locking Clip

It should be about 1 in. (2.5 cm) from vehicle belt's latch plate.

### 4. Rebuckle Vehicle Belt



Tightness Hold child restraint at the belt path with

5. Check Belt

your weakest hand. Push and pull from side to side. It

should not move more than 1 in. (2.5 cm). If it moves more than 1 in. (2.5 cm), you can try: A. Reinstalling the child restraint. B. Changing to a different seating location.

When installed rear facing, recheck the level line.

When installed forward facing, make sure to tighten the tether strap.

Remove the locking clip when the seat belt is not being used with a child restraint.

# **Dorel Juvenile Group Information**

Thank you for choosing this child restraint. The DJG family is committed to creating child restraints with the most comfort and convenience available today.

Remember, parents are a child's first teachers and examples. If you always buckle your seat belt, your child will think it is the natural thing to do. Make it a firm rule that the vehicle does not go until everyone is buckled up. Make no exceptions. No one can predict if use of a child restraint will prevent injury or death in a particular crash. However, when combined with careful driving, proper use of a child restraint can lower a child's risk of injury or death in most crashes.

Your child's safety is worth the time it will take to read and follow these instructions. After reading, if you still have questions or have any concerns with this child restraint, please contact our Consumer Care Department at:

Website: www.coscokids.com Telephone: 1-800-544-1108 M-TH from 8 A.M. to 6 P.M. EST FRI from 8 A.M. to 4:30 P.M. EST Mailing Address:

Dorel Juvenile Group, Inc. Consumer Care Department P.O. Box 2609 Columbus, IN 47202-2609


# Registration and Safety Notices

Please complete the postage-paid registration card that came with your child restraint, and send it to us. Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, email address if available and the restraint's model number and manufacturing date to:

Dorel Juvenile Group, Inc. Consumer Care Department PO Box 2609 Columbus, IN 47202-2609

or call 1-800-544-1108 or register online at www.djgusa.com/registration/carseat/us.

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1–888– 327–4236 (TTY: 1–800–424–9153), or go to http://www.NHTSA.gov.

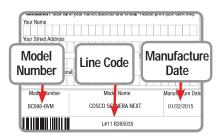

Example of model number, manufacture date, and line code.



If you don't have the card or if your address changes, you will find the model number, manufacture date, and line code on the label located on side of shell.

# Troubleshooting

# 1. Locate a Child Safety Seat Inspection Station for hands on training on how to use your child restraint:

Visit your local Child Passenger Inspection Station or go to http://www.safercar.gov/cps/pp/cps/index.htm to find your closest station.

# 2. If the child restraint buckle or harness release lever sticks or you cannot get the straps tight enough around child:

DO NOT LUBRICATE. Check around lever and retractor for dropped food, sticky spilled drinks, dirt, leaves, etc. Clean with warm water and/or remove object with tweezers. If you cannot get the harness to adjust and remain tight with the buckle securely locked, do not use the child restraint.

### 3. If your harness twists:

Straighten the harness each time you put your child in the child restraint to help prevent twisting. Lock the buckle and tighten harness and it will be ready for next use.

# Replacement Parts Order Form

Complete the form. Your model number and manufacturer date code **MUST** be included on the form to ensure proper replacement parts. The codes can be found on a label on side of child restraint. Payment in U.S. dollars must accompany your order. Choose parts needed from the list on the next page. Return the form with payment to:

### Dorel Juvenile Group, Inc. Consumer Care Department P.O. Box 2609

Columbus, IN 47202-2609

Please make money orders payable to Dorel Juvenile Group, Inc. Fill in the area on the next page to charge credit card. (Visa or MasterCard **only**). We do not accept cash, personal checks, or other credit cards. All outside of U.S. and Canada **MUST** use credit card.

Name:
Address:
City:
State/Province:Zip:
Telephone:
Email Address:
We MUST have this information:
Model Number (8 to 9 characters):

Manufacture Date (mm/dd/yyyy):

Ship To: (Please Print)

### **Replacement Parts List**

**NOTE:** If requested color is not available, similar color will be substituted. Prices are subject to change.

Part	Cost	Qty	<b>Total Cost</b>	
Buckle Assembly				Gi
Harness Strap	\$2.99		\$	No
Seat Pad Set	\$24.00		\$	for ins
Chest Clip			\$	sh
Tether Kit	\$6.50		\$	
Lower Anchor Bel	t \$17.99		\$	
Instructions	\$0.00			
Locking Clip	\$2.50		\$	Card E
Merchandise 1	<b>Total</b>		\$	Cardho
Shipping and	Carun			
Up to \$25.00 \$25.01 to \$50.00			150.00\$10.95 200.00\$11.95	Card N
\$50.01 to \$75.00			up \$13.95	Signat
\$75.01 to \$100.00\$ 61	\$9.95 Outsi \$10.0		inental USA	

### Sales Tax .....\$

(Arizona, California, Georgia, Indiana, Missouri, South Carolina, and Texas residents add applicable sales tax.)

# Grand Total ......\$\_\_\_\_\_\_ No shipping and handling on instructions for quantities under 6. Add \$.50 for each instruction over 6, then add applicable shipping and handling. Fill Out For Credit Card **q** Visa **q** MasterCard Card Exp. Date: Cardholder's Name: Card Number: Signature:

### Warranty

C

F

0Z

DOTTED

۲Z

m

Dorel Juvenile Group, Inc. (DJG) warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. **An original** receipt is required to validate your warranty. DJG will, at its option, provide replacement parts or replace this product. DJG reserves the right to substitute if the part or model has been discontinued. To make a claim under this warranty write to DJG, Consumer Care Department, P. O. Box 2609, Columbus, IN 47202-2609; or call 1-800-544-1108 from 8:00 a.m. to 6:00 p.m. EST Monday through Thursday and from 8:00 a.m. to 4:30 p.m. on Friday. Proof of purchase is required and shipping charges are the responsibility of the consumer.

Warranty Limitations: This warranty does not include damages which arise from misuse or abuse of this product. Limitation of Damages: The warranty and remedies as set forth are exclusive and in lieu of all others, oral or written, expressed or implied. In no event will DJG or the dealer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product. Limitation of warranties and other warranty terms and state law rights: Any implied warranties, including implied warranties of the merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations as to how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither DJG nor the dealer selling this product authorized any person to create for it any other warranty, obligation, or liability in connection with this product.